

NO STRAIGHT PIPE DISTANCES ARE REQUIRED UPSTREAM OR DOWNSTREAM OF THE ELF SENSOR. MAKE SURE THE SHORTER, DISCHARGE, END OF THE SENSOR IS ON THE DOWNSTREAM SIDE.

(00)

ELF SERIES FLOW SENSOR INSTALLATION